



MINI LED GOBO SPOT 60 W PRISM

Quickstart manual

1. Menu functions

	Level 1	Level 2	Level 3
Dmx address setup	Address	<i>Address 001</i>	<i>Address 512</i>
DMX mode select	DMX Mode	<i>DMX Mode 10CH</i>	<i>DMX Mode 12CH</i>
Automatic mode	Auto	<i>Auto Run>>>>>></i>	
Sound mode	Sound	<i>Sound Run>>>>>></i>	
Manual mode	Manual	<i>(...)</i>	
PAN TILT direction	Set	<i>Set rpan</i>	<i>rpan No/Yes</i>
		<i>Set rtilt</i>	<i>rtilt No/Yes</i>
Fixture reset	Reset	<i>Reset</i>	<i>Reset No/Yes</i>
Restore default values	Default	<i>Default</i>	<i>Default No/Yes</i>
Software version	Version		

Level 1	Level 2
Manual	<i>Manual Pan</i>
	<i>Manual Panf</i>
	<i>Manual Tilt</i>
	<i>Manual Tiltf</i>
	<i>Manual XYSpeed</i>
	<i>Manual Dimmer</i>
	<i>Manual Strobe</i>
	<i>Manual Color</i>
	<i>Manual Gobo</i>
	<i>Manual Prism</i>
	<i>Manual Function</i>
	<i>Manual Reset</i>

Navigate using **UP/DOWN** buttons, function select and saving values with **ENTER** button.
MENU button – returns you to previous menu level.

2. DMX modes

10CH	12CH	Range	Function
1	1	000-255	Pan
	2	000-255	Pan fine
2	3	000-255	Tilt
	4	000-255	Tilt fine
3	5	000-255	PT speed (fast-slow)
4	6	000-255	Dimmer
5	7	000-003	Closed
		004-059	Strobe (slow-fast)
		060-063	Open
		064-123	Strobe 2 (slow-fast)
		124-127	Open
		128-191	Pulse (slow-fast)
		192-195	Open
		196-253	Pulse 2 (slow-fast)
		254-255	Open
6	8	000-004	Open
		005-024	Red
		025-049	Yellow
		050-074	Blue
		075-099	Green
		100-124	Orange
		125-149	Cyan
		150-174	Pink
		175-199	Light green
		200-225	Magenta
7	9	226-255	Color scroll
		000-004	Open
		005-025	Gobo 1
		026-045	Gobo 2
		046-065	Gobo 3
		066-085	Gobo 4
		086-105	Gobo 5
		106-125	Gobo 6
		126-145	Gobo 7
		146-165	Gobo 8
		166-185	Gobo 9
		186-205	Gobo 10
		206-242	Gobo 11
		243-255	Gobo scroll
8	10	000-015	Prism off
		016-127	Prism on
		128-255	Prism rotation (slow-fast)
9	11	000-019	DMX mode
		020-099	Auto mode
		100-199	Sound mode
		200-255	DMX mode
10	12	200-255	Fixture reset after 5s

3. Specification

Specification	
Power consumption	80 W
Supply voltage	100 - 240 V
Supply frequency	50 - 60 Hz
Diode type	Standard LED
Diode number	1
Diode power	60 W
Prism	3 sided
Color wheel	9 + open
Gobo wheel	11 patterns+ open
Display	LCD
Control	4 buttons
Dimming	Smooth 0-100%
PAN movement	180 - 540°
TILT movenet	90 - 270°
DMX channels	10 / 12
Control	DMX, Auto, Master/Slave, Sound
DMX IN	XLR
DMX OUT	XLR
Enclosure	ABS
Cooling	yes